

MAINTENANCE SCHEDULE FOR VEHICLE YEAR 1997 & FOLLOWING YEARS 3,000

Miles - Change oil & filter.

6,000 Miles - Change oil & filter. Lubricate chassis components. Rotate tires.

9,000 Miles - Change oil & filter.

12,000 Miles - Change oil & filter. Lubricate chassis components. Rotate tires.

15,000 Miles -Change oil & filter.

18,000 Miles -Change oil & filter. Lubricate chassis components. Rotate tires.

21,000 Miles - Change oil & filter.

24,000 Miles - Change oil & filter. Lubricate chassis components. Rotate tires. Check brakes.

27,000 Miles - Change oil & filter.

30,000 Miles - Change oil & filter. Lubricate chassis components. Replace air filter. Inspect Exhaust Gas Recirculation (EGR) system. Inspect fuel tank, cap and lines for damages or leaks. Inspect fuel cap gasket for damage. Replace parts as needed. Rotate tires. Check brakes.

33,000 Miles - Change oil & filter.

36,000 Miles - Change oil & filter. Lubricate chassis components. Rotate tires. Check brakes.

39,000 Miles - Change oil & filter.

42,000 Miles - Change oil & filter. Lubricate chassis components. Rotate tires. Check brakes.

45,000 Miles - Change oil & filter.

48,000 Miles - Change oil & filter. Lubricate chassis components. Rotate tires. Check brakes.

51,000 Miles - Change oil & filter.

54,000 Miles - Change oil & filter. Lubricate chassis components. Rotate tires. Check brakes.

57,000 Miles - Change oil & filter

60,000 Miles - Change oil & filter. Lubricate chassis components. Inspect engine accessory drive belt. Replace air cleaner filter. Inspect fuel tank, cap and lines for damages or leaks. Inspect Exhaust Gas Recirculation (EGR) system. Rotate tires. Check brakes.

63,000 Miles - Change oil & filter

66,000 Miles - Change oil & filter. Lubricate chassis components. Rotate tires. Check brakes.

69,000 Miles - Change oil & filter

72,000 Miles - Change oil & filter. Lubricate chassis components. Rotate tires. Check brakes.

75,000 Miles - Change oil & filter. Inspect Air filter

78,000 Miles - Change oil & filter. Lubricate chassis components. Rotate tires. Check brakes.

81,000 Miles - Change oil & filter.

84,000 Miles - Change oil & filter. Lubricate chassis components. Rotate tires. Check brakes.

87,000 Miles - Change oil & filter

90,000 Miles - Change oil & filter. Lubricate chassis components. Replace Air cleaner filter. Inspect fuel cap gasket for any damage. Replace parts as needed. Inspect Exhaust Gas Recirculation (EGR) system. Rotate tires. Check brakes.

100,000 Miles - Inspect spark plug wires. Replace spark plugs.

START OVER AT TOP OF PAGE